

# Heatmiser RC2-W

*Wireless Receiver*

*(Compatible with PRT-EW Only)*

Ref: RC2-W

Rev: 1.0



## Contents

Installation Procedure	2
Pairing Instructions	3-4
LED's Explained	5
Diagrams	6

## **Installation Procedure**

The receiver is designed to be surface mounted. A back box of 35mm should have been sunk in the wall prior to installation.

### Step 1

Carefully separate the front half of the receiver from the back plate by placing a small flat head terminal driver into the slots on the bottom face of the thermostat.

### Step 2

Place the front part somewhere safe.

### Step 3

Terminate the receiver according to the diagrams provided in this booklet.

## Step 4

Screw the back plate to the back box and clip the receiver front onto the back plate.

## Pairing the Thermostat

With the thermostat turned off

- Press the Clock button until the LCD comes on.
- You will now see a small number 01 in the top right corner of the LCD. This is feature 01
  
- Press Clock again until you see feature 07  
01-32 Receiver Address (RF is disabled if receiver Address is set to 00)
- Use the Up/Down keys to set feature 07 to 01 (You should set a unique receiver address for each receiver installed)

- Press A to accept, the display will now go blank.

## **Pairing the thermostat**

- On the receiver, press and hold the pairing button until the Comms LED comes on
- Turn off the thermostat by holding down the power button.
- On the thermostat, press the A key for 5 seconds. The thermostat will send a signal for 1 minute, and will flash the RF signal icon.
- If successful, the receiver will flash the Comms LED.
- Press the Pairing Button on the receiver to store
- If the pairing is unsuccessful, reposition the thermostat and try again.

## LED's Explained


There are 4 lights on the receiver.

Power

Zone 1

Limit

Comms

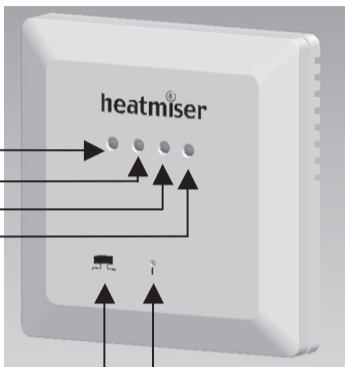

On/Off  
Switch

Pairing  
Button

(230v –  
16A)

