


UH8

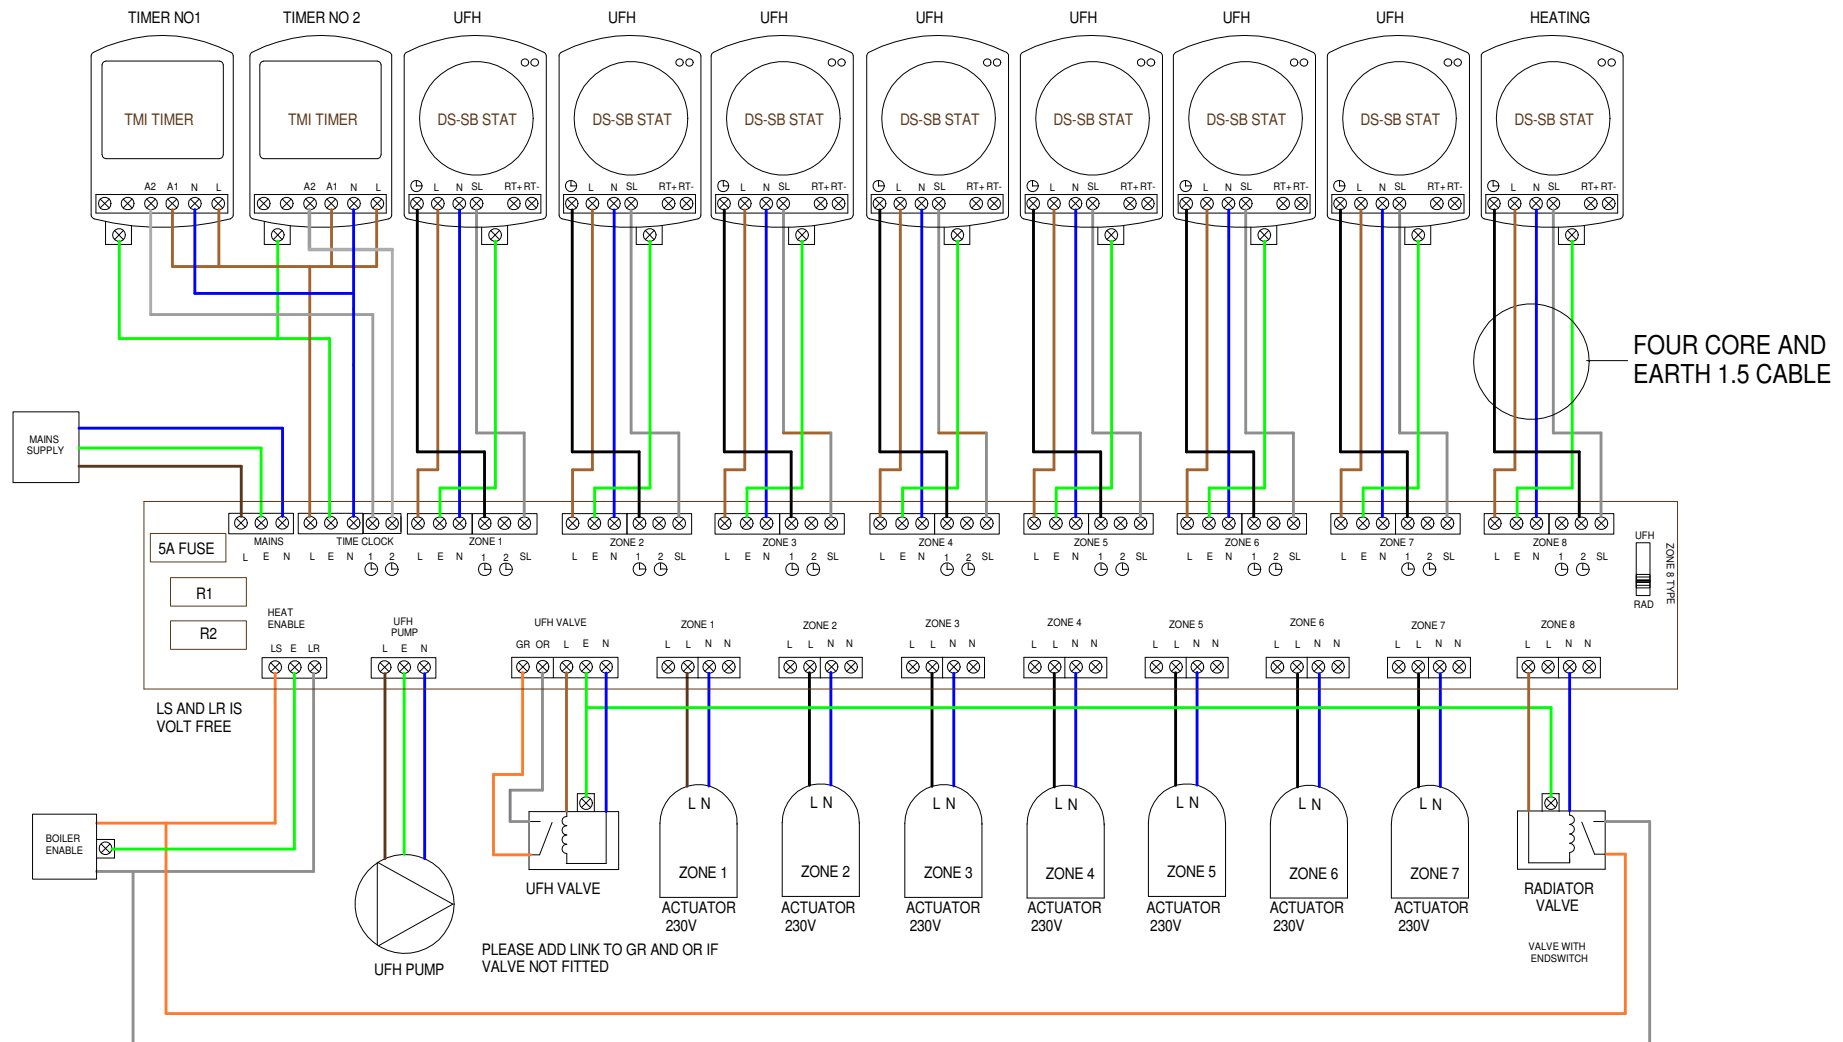

UFM UNDER FLOOR MANIFOLD

LIVE ———
 TIMER LIVE ———
 SWITCH LIVE ———
 NEUTRAL ———
 EARTH ———
 END SWITCH AND
 BOILER ENABLE ———

This equipment should be installed by an appropriately qualified/ registered electrician.
 Fully read the instructions for proper wiring before applying power.
 The warranty does not cover damage from improper wiring or installation.

DRAWING 5

DS-SB TO UH8
 WIRING DIAGRAM

13/05/2015