

Want More Information?

Call our support team on: +44 (0)1254 669090

Or view technical specifications directly on our website: www.heatmiser.com







PDF FAQ **VIDEO**



Google Play

App Store

Download on the



auj oj aaufie not anuguon fueldes (g





pionssed e associo pue ssaippe To create an account, simply enter your email

neoApp and register your account. as your neoHub. Download the FREE Heatmiser Connect your mobile device to the same with network

Add Location 2 Download Application



Connect Power

Connect the power supply to the Hub.

Connect the Hub to your router with the

qnHoəu

the link light will turn GREEN.

connected to your network.

ethernet cable provided.

Setting Up neoHub

neoHub **Smart Gateway**





heatmiser

...in a new look

IMI Heatmiser



Once connected to the Heatmiser cloud server,

The Link light will light up RED oncethe Hub has

I geset Button



- Windows Operating System.
- A mobile device running iOS, Android or
- A broadband router with DHCP function. connection for 6-12V DC output. Includes a 2.1mm DC jack plug
- 250V mains supply (adapter included).
 - An active broadband connection.

System Requirements

home heating system. will soon have smart control over your Just follow this quick start guide and you simple to setup. The neoHub is designed to be quick and



ADD LOCATION.

Once registered & signed in , select

4 Connect To neoHub

Press the connect button on the Hub to add the location to your Account.



5 Name Your neoHub

When connected, add a title (e.g. Home). The next step is to pair Neo devices to the Hub. Select *ADD NEOSTAT* in the app.



6 Add Zone

Select from a preset title or enter your own custom title for the device, then press *NEXT*. The status light on the hub will now flash.



7 Pairing mode active

- 1 Use the < / > keys to select ⊕ press and hold the ✓ key.
- **2 SETUP** is now selected, press the ✓ key twice.
- 3 The symbol will start flashing.
- 4 Once connected to the hub, the symbol will be permanently displayed.



8 Add Another/Finish

Press ADD ANOTHER for any additional devices or press FINISH.





To perform a factory reset on this device, press and hold the reset button shown in the diagram below for 15 seconds. Release the button when the power light begins to flash.

Allow approximately 5 minutes for the hub to fully reset and reboot. Please note that a factory reset will erase all connected devices, which will need to be re-paired after the reset.





1. Pair your Heatmiser neoHub to Apple HomeKit with the neoApp.

- From the settings screen, select HomeKit & Siri.
- If no HomeKit homes have been created Select CREATE A NEW HOME
- Enter a title for your home.
- Tap on the right arrow to enter the home.
- Select ADD NEW ACCESSORY
 The app will now scan for compatible
 HomeKit devices
- Click on Heatmiser neoHub, scan the HomeKit setup code on the reverse of your neoHub with the camera on your iOS device.

Your neoHub is now successfully paired to HomeKit!

2. Assign your devices to rooms.

The next steps in the app are to sort all attached devices paired to the neoHub into your HomeKit rooms.

At the same time, you can edit the service names of the attached devices.

Rename the service as you would like to refer to it via Siri voice control, and assign it to the relevant room.

Repeat this process for all of your devices.

Once you have done this select **FINISH SETUP.**

3. Create automations, share control and configure other HomeKit enabled devices.

Learn how to set HomeKit automations, use Siri voice control, add users and configure other Apple devices with the iOS18 Home app - visit: www.apple.com/uk/ios/home



See neo.heatmiser.com for more details.