

heatmiser®



Model: **EDGE-HC**

Modbus

Model: Edge-HC (Modbus)





Table Of Contents

Product Image	1	Locking/Unlocking the Edge-HC	22
Table of Contents	2	Holiday	23
Installation Procedure	3-4	Feature Menu Settings Explained	24-26
System Type	5-6	Feature Menu	27-28
LCD Display	7-8	Adjusting the Feature Menu Settings	29
Power On/OFF	9	Fail Safe/Modbus	30
Setting the Time & Date	10	Recalibrating the Edge-HC	31
Pairing Accessories	11-12	Error Codes	31
View Pairing Accessories	13	Wiring Diagrams	32-36
Removing Accessories	14	Replacing the Battery	37
Mode Select	15		
Fan Speed	15		
Temperature Display	16		
Manual Temperature Control	17		
Edit Comfort Levels	18-19		
Temperature Hold	20		
Frost Protection	21		



Installation Procedure



Do

Mount the 'edge-HC' at eye level. Recommended height **1.5 meters**.
Read the instructions fully so you get the best from our product.

Don't



Do **not** install near to a direct heat source as this will affect functionality.

Do **not** position behind curtains or block by furniture.

Do **not** install near electric fires, televisions, wall or table lamps as this may also prevent the thermostat from working properly.

Do **not** push hard on the LCD screen as this may cause irreparable damage.

This thermostat is designed to be flush mounted and requires a back box of 35mm (minimum depth) to be sunk into the wall prior to installation.

Step 1

Using a small screwdriver, slightly loosen the screw from the bottom face of the thermostat. You can then carefully separate the front half from the back plate.

Step 2

Place the 'edge-HC' LCD front plate somewhere safe.

Terminate the wires as shown in the diagrams on pages 32-36 of this booklet.

Step 3

Screw the 'edge-HC' back plate securely into the back box.

Step 4

Replace the front of the thermostat onto the back plate, by locating the pins in the socket then insert the top edge first. Now push in the bottom edge, securing it in place with the retaining screw.

1



2



3



4





System Type

'System Type' makes sure that the thermostat operation and switched outputs are configured to the correct installation.

Key: NO = Normally Open Valve, NC = Normally Closed Valve

Hf = High Fan, Mf = Medium Fan, Lf = Low Fan speeds.

01 = 2 Pipe System Manual Select Heat or Cool

Heat, Cool & Ventilation modes both with 3 speed fan and Normally Open, Normally Closed valve connection method.

Heat = Auto & Manual fan.

Terminal Outputs

Fan: 'Hf''Mf''Lf'

Cool = Auto & Manual fan.

Valve: 'V1' = NO, 'V2' = NC.

Vent = Manual 3 speed selectable fan.

02 = 2 Pipe System Cool Only

Cool and Vent options only, with 3 speed fan and Normally Open, Normally Closed connection method.

Cool = Auto & Manual fan.

Terminal Outputs

Fan: 'Hf''Mf''Lf'

Vent = Manual 3 speed selectable fan.

Valve: 'V1' = NO, 'V2' = NC.

03 = 2 Pipe System Manual Select Heat or Cool (Twin Valve output)

Heat, Cool, & Ventilation modes with 3 speed fan (Cool & Vent only) and twin valve outputs.

Cool = Auto & Manual fan for cooling only! No fan output for heating.

Vent = Manual 3 speed selectable fan.

Terminal Outputs

Fan: 'Hf''Mf''Lf'

Valve: 'V1' for 'Cooling'.

Valve: 'V2' for 'Heating'.



System Type cont...

04 = 4 Pipe System Heat, Cool and Auto

Heat, Cool, Auto & Ventilation modes with 3 speed fan (all modes) and twin valve outputs.

Heat, Cool, Auto = Auto & Manual fan.

Vent = Manual 3 speed selectable fan.

Terminal Outputs

Fan: 'Hf''Mf''Lf'

Valve: 'V1' for 'Cooling'.

Valve: 'V2' for 'Heating'.

05 = 2 Pipe System Heat, Cool with 2 stage heating.

Heat, Cool & Ventilation modes with 3 speed fan (all modes) and 2 stage heating output.

1st stage Heat = No Fan

2nd stage Heat = Auto & Manual fan.

Cool = Auto & Manual fan.

Vent = Manual 3 speed selectable fan.

Terminal Outputs



Fan: 'Hf''Mf''Lf'

Valve: 'V1' for 'Cooling' &


2nd stage heating.

Valve: 'V2' for 'Heating'.


To select the desired 'System Type'...

• Use the 'Left/Right' arrow keys to highlight  then press and hold the  button for 3 seconds to turn off the display



• Tap the 'Up' key to select 'Setup' then press 



• Press the 'Down' key until you see 'TYPE' displayed at the top of the screen then press 




You will now see a large 2 digit number centre screen. This is the 'System Type' number.

• Use the 'Left/Right' arrow keys to select the desired type from the list above.

• Press  to confirm selection



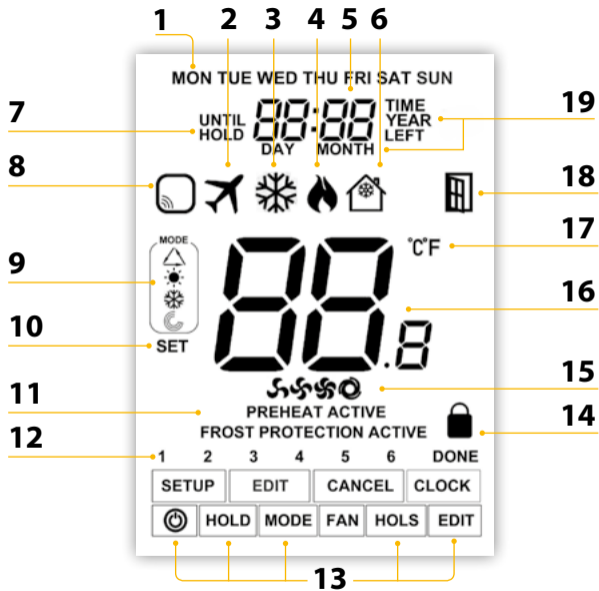

LCD Display

1. Day Indicator - Displays the day of the week.
2. Holiday – Displayed when the thermostat is in holiday mode.
3. Cool Symbol – Displayed when cooling is active.
4. Flame Symbol – Displayed when the thermostat is calling for heat and flashes when optimum start is active.
5. Clock - Time displayed in 24 hour format.
6. Frost Protection/Standby – Displayed when frost protection is enabled or activated by a Window/Door Switch.
7. Until/Hold - Displayed when the edge-HC has been manually overridden to the next programmed comfort level, or held to a certain temperature for a select period.
8. Sensor Warning - Flashes on screen when the edge has failed to receive a signal from a Wireless Sensor or Window Switch.
9. Mode Indicator – Displays current mode of operation (Auto, Heat, Cool, Ventilation).
10. Set – Displays when changes are being made to the configuration and current set temperature points.
11. Active Status - Indication for 'Preheat' and 'Frost Protection' modes.
12. Program Indicator - Displayed during programming to show which period is being altered.
13. Main Menu – Highlighted text indicates selected option.
14. Keypad Lock Indicator – Displayed when the keypad is locked.
15. Fan Icons – Static display icon when the fan is activated and flashes while selecting the desired fan speed.
16. Temperature – Displays the ambient room temperature.
17. Temperature Format - Degrees Celsius or Fahrenheit.
18. Window Icon - Displays when Window/Door Switch is triggered.
19. Time/Day/Month/Year - Displays when setting the Clock/Calendar or a Holiday period.



Power On/Off

When heating or cooling is in demand the flame or snowflake symbols will appear.

When the flame/snowflake icons are absent, there is no requirement for heating or cooling, but the 'edge-HC' remains active.

To turn the thermostat off completely, scroll to the Power Icon and hold the

✓ key for approximately 3 seconds until the display goes blank <> ✓

The display, plus heat, cool and fan outputs will be turned OFF.

To turn the edge-HC back ON, press the ✓ key once ✓

Thermostat completely OFF















Thermostat powered ON





Setting the Time and Date

To set the clock, follow these steps.

- Use the 'Left/Right' arrow keys to highlight  then press and **hold** the  button for 3 seconds 
- At this point the screen will go blank showing only 'SETUP' and 'CLOCK'.*
- Tap the 'Up' followed by 'Right' keys to highlight 'CLOCK' 
- Press  to confirm selection ('Hour' digits will now flash) 
- Use the 'Up/Down' arrow keys followed by  to set the 'Hours' 
- Use the 'Up/Down' arrow keys followed by  to set the 'Minutes' 
- Repeat the previous two steps to set the date ('Day, Month & Year').
Display will go blank once completed.*
- Press the 'Down' arrow key followed by  to return to the main display 



Pairing Accessories

Wireless Air Sensor. Door/Window - Wireless Contact Sensor
(Not available in Time Clock mode).

You can pair a total of 16 accessories to a single 'edge-HC' thermostat.

Wireless Air Sensor

Once a remote sensor is added, the edge will automatically display an average temperature between the 'Wireless Air Sensor' and the on-board sensor inside the thermostat. Averaging will also be calculated between multiple Air Sensors.





Window/Door Wireless Contact Sensor

If any one of the 'Window/Door' contacts is broken, the edge thermostat will be alerted and will activate 'Frost Protection' mode. The display will now show the icon (right) to indicate a window or door has been opened. Heating or Cooling will not resume while this icon remains on screen.



Note: the contact sensor will not stop the fans in ventilation mode.

Pairing the Air Sensor and Window/Door Contact.

- Use the 'Left/Right' arrow keys to highlight  then press and **hold** the  button for 3 seconds to turn off the display
- Tap the 'Up' key to select 'Setup' then press 
- Press the 'Down' key until you see the letter 'P' displayed at the top of the screen then press 



The thermostat will now start a 99 second countdown. During this time multiple sensors can be added.

Number of accessories connected.



Countdown time

- On the 'Air Sensor & Window/Door Contact', press and hold the pairing button for 5 seconds. The LED will glow red to indicate pairing status

Window/Door Wireless Contact Sensor

Wireless Air Sensor

Pair/Reset button



LED Indicator



Pair/Reset button

If the sensor has successfully paired, the LED will go out after a few seconds. The thermostat display will then show '01:P' to indicate that the first accessory has joined. If countdown time elapses before all accessories have been paired, restart the countdown to add further sensors following the previous steps.



View Accessories

- Use the 'Left/Right' arrow keys to highlight . Press and hold ✓ for 3 seconds to turn off the display.....
- Tap the 'Up' key to select 'Setup' then press ✓.....
- Press the 'Down' key until you see the letter 'A' displayed at the top of the screen, then press ✓.....



Accessory ID Number



Current Status

Low Battery Warning

Example showing 'Wireless Air Sensor'.

- Use the 'Left/Right' arrow keys to scroll through the list of attached accessories. A 'Wireless Air Sensor' will show the current temperature. The 'Window/Door Contact' will display current open or closed status by showing 'OP' = Open, or 'CL' = Closed. If the edge loses connection with an accessory, the display will show "--". A battery warning symbol will be appear when an accessory reports low power. When this happens change the **Lithium Cell CR2302 3V** battery as soon as possible.



Removing Accessories


There are two ways to remove an accessory from the edge thermostat.

On the Sensor/Switch

- Press and hold down the pairing/reset button for 15 seconds on the 'Sensor/Switch'. LED indicator will flash 3 times to confirm reset.

Window/Door Wireless Contact Sensor

Wireless Air Sensor

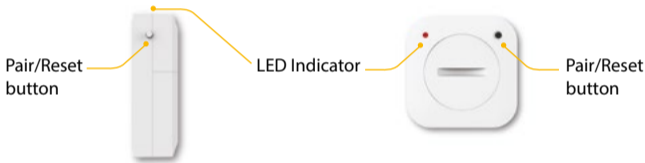

At this point the 'Sensor/Contact' will notify the edge that it has left, and will automatically be removed from the 'Accessory Menu'.

On the edge thermostat

- Follow the steps on page 13 to enter the accessory menu.
- Press the 'Left/Right' arrow keys to view the accessory that will be deleted.
- Press and hold down the ✓ button for 10 seconds until the sensor disappears from the menu

Note: You will also need to reset the sensor at this point. ✓

Mode Select

'edge-HC' can be used as a heating/cooling thermostat and a fan ventilation controller, (mode options dependent on 'System TYPE' pages 5 & 6).

To select the mode:

- Use the 'Left/Right' keys to scroll to 'MODE' then press ✓
- Repeatedly press the 'Up' or 'Down' keys to select the mode
The selected mode will now flash.
- Press ✓ to confirm



Fan Speed

'edge-HC' allows for manual or automatic fan control for both heating and cooling. When set to manual there are 3 options, 'Low', 'Medium' & 'High'. In auto, the thermostat will choose the correct fan speed dependent on set temperature to actual temperature difference.

3°C/6°F = High Fan 2°C/4°F = Medium Fan 1°C/2°F = Low Fan

To select the fan speed:

- Use the 'Left/Right' keys to scroll to 'FAN' then press ✓
- Repeatedly press the 'Up' or 'Down' keys to select the speed
The selected speed will now flash.
- Press ✓ to confirm





Temperature Display

'edge-HC' will always show the ambient room temperature. If wireless remote sensors are paired, the display will automatically show an average temperature between all sensors.



Room Temperature



Set Temperature

 
To view the set temperature (Heat or Cool modes only):

- Press either the 'Up' or 'Down' arrow key once
- Press tick to return to main screen



To view the set temperatures for (Auto Heat/Cooling):

- Use either the 'Up' or 'Down' arrow key once to view 'HEAT/COOL' set temp
- Press tick to view the next set temperature
- Press tick a second time to return to main screen



The 'SET' screen will timeout after 10 seconds if the tick button is not pressed.



Manual Temperature Control

The 'Up/Down' keys allow you to adjust the current set temperature. When you press either key, you will see the word 'SET' and the desired temperature value.

- Use the 'Up/Down' keys to adjust the 'SET' value ^ v
- Press ✓ to confirm settings and return to the main display ✓

Indicates whether Heat or Cool is being set.



Until next programmed 'Comfort Level' time.

Set Temperature

In 'Auto' mode you are required to set both 'Heat' and 'Cool' temperatures!

Note: This new temperature is maintained only until the next programmed comfort level. At this time, the thermostat will revert back to the programmed schedule.



Edit Comfort Levels

The 'edge-HC' offers three program mode options; Weekday/Weekend, 7 Day and 24 Hour programming. There is also the option to use the 'edge-HC' as a manual thermostat.

The thermostat is supplied with comfort levels already factory programmed, but these can be changed easily. The default times and temperature settings are;

Heating defaults

07:00 - 21°C (Level 1) 09:00 - 16°C (Level 2) 16:00 - 21°C (Level 3) 22:00 - 16°C (Level 4)

Cooling defaults

07:00 - 23°C (Level 1) 09:00 - 26°C (Level 2) 16:00 - 23°C (Level 3) 22:00 - 26°C (Level 4)

Time for unused levels must be set to --:-- so that the 'edge-HC' will skip these and continue on to the next programmed time.

Auto Mode

In 'Auto' mode you will set both 'HEAT' and 'COOL' set points for each level.

To disable cooling for a particular level, adjust the 'COOL' set point by a continual press of the 'Up' key until the display shows --.-

To disable heating for a particular level, adjust the 'HEAT' set point by a continual press of the 'Down' key until the display shows --.-

Note: For Weekday/Weekend programming, the four comfort levels are the same for Mon-Fri, but can be different for Sat-Sun. For 7 Day programming each day of the week can have four different comfort levels. In 24 Hour mode all days are programmed with the same comfort levels.

- To program the 'Comfort Levels, use the 'Left/Right' keys to scroll to 'EDIT' <>
- Press ✓ to confirm <>
- Use the 'Left/Right' keys to select day/period of week (the selection will flash) .. <>
- Press ✓ to confirm selection ✓
'Level 1' will now flash and the current time and temperature setting will be shown.
- Press ✓ to alter 'Level 1' settings ✓
- Use the 'Up/Down' keys to set the 'Hours' then ✓ to confirm ↑ ↓ ✓
- Use the 'Up/Down' keys to set the 'Minutes' then ✓ to confirm ↑ ↓ ✓
- Use the 'Up/Down' keys to set the temperature ↑ ↓ ✓
- Press ✓ to confirm the settings ✓

Note: At this stage in **'Auto'** you will be prompted to enter the 'COOL' temperature immediately following the 'HEAT' input, or vice versa depending on the current active mode.

- Press ✓ to confirm the settings ✓
- Press the 'Right' arrow key >
'Level 2' will now flash and the current settings will be displayed.
- **Tip:** In **'Auto'** mode you can quickly glance at both 'HEAT' & 'COOL' temperatures by pressing the 'Up/Down' keys while the selected level number is flashing.
- Press ✓ to alter 'Level 2' settings ✓

Repeat these steps to set all comfort levels. For any unused periods set time to --:--

- Use the 'Left/Right' keys to scroll to 'DONE' and press ✓ <> ✓

You can you set up to a maximum of 6 levels by enabling these in the feature menu (see page 24)



Temperature Hold

The temperature hold function allows you to manually override the current operating program and set a different temperature for a desired period.

- Use the 'Left/Right' keys to scroll to 'Hold' and press ✓ <> ✓
- Repeatedly tap the 'Up/Down' keys to set the desired 'Hold' time (Hours) then press ✓ ^v ✓
Minutes will now flash.
- Repeatedly tap the 'Up/Down' keys to set the desired 'Hold' time (Minutes) then press ✓ ^v ✓
- Use the 'Up/Down' keys to set the desired 'Hold' temperature ^v ✓
- Press ✓ to confirm selection ✓

You will see the 'HOLD LEFT' indication is displayed on screen.

The time will countdown the set duration and then revert to the normal program.

Auto Mode

In 'Auto' mode both 'HEAT' and 'COOL' set points are required for the duration.

Cancel/Edit Temperature Hold

- Use the 'Left/Right' keys to scroll to 'Hold' and press ✓ <> ✓
- While 'CANCEL' is highlighted press ✓ to cancel 'Hold' and return to normal operation ✓
- Alternatively, press the 'Left' arrow key to highlight 'EDIT' them press ✓ to adjust current 'Hold' settings <> ✓

To edit 'Hold' settings follow the same procedure as indicated in the steps at the top of this page.



Frost Protection (Heating Mode Only)

Use the 'Left/Right' keys to scroll to the 'Power Icon'



The frost icon will toggle ON/OFF each time ✓ is pressed



In this mode, the edge-HC will display the frost icon and will only turn the heating 'ON' should the room temperature drop below the set frost temperature. If the heating is turned 'ON' whilst in frost mode, the flame symbol will be displayed.

To cancel the frost protect mode, navigate to the 'Power Icon' again, then press ✓



Note: In 'COOL' mode the thermostat will go into standby.



Frost Protection Symbol

Display showing 'Standby' in 'Auto' mode as current status = Cooling





Locking the edge-HC

The 'edge-HC' has a keypad lock facility. To activate the lock follow these steps.

- Use the 'Left/Right' keys to scroll to 'HOLD' & press ✓ for 7 seconds..... <>✓
The display will show 0000. At this point enter a four digit pin number.
- Use the 'Up/Down' keys to enter values ^v
- Use the 'Left/Right' keys to move between digits <>
- Press ✓ to confirm ✓

The display will return to the main screen and display the keypad lock indicator ...

Note: The keypad lock indicator is only displayed when the lock is active.



Unlocking the edge-HC

- To unlock the 'edge-HC' press ✓ once..... ✓
The display will show 0000. At this point enter the four digit pin number you set previously.
- Use the 'Up/Down' keys to enter values ^v
- Use the 'Left/Right' keys to move between digits <>
- Press ✓ to confirm ✓

The display will unlock and return to the main screen.



Holiday

The holiday function reduces the set temperature in your home to the frost mode temperature setting that is configured in the setup menu.

The 'edge-HC' will maintain this temperature if necessary for the duration of the holiday and will automatically return to the program mode on your return.

Caution! If left in 'COOL' mode the holiday function will place the thermostat into standby and therefore 'Frost Protection' will **not** be available.

In this instance the display will show ✈ but **not** 'Frost Protection Active'.

To set a 'Holiday'

- Use the 'Left/Right' keys to highlight 'HOLS' then press ✓ < > ✓
- Enter the return time (hours) by using the 'Up/Down' keys then press ✓ to confirm ^ v ✓
- Enter the return time (minutes) by using the 'Up/Down' keys then press ✓ to confirm ^ v ✓
- Repeat these steps to set 'Day', 'Month' & 'Year' ^ v ✓

The display will now show ✈ and indicate 'Frost Protection Active'

To view or change the 'Set' frost temperature while in 'Holiday' mode, press the 'Up/Down' keys followed by ✓ to confirm ^ v ✓

Note: A holiday cannot be set while the thermostat is in 'Ventilation' mode.



Feature Menu Settings Explained

These features allow you to set the correct parameters for initial setup.

System Type: Configures the thermostat settings and switched outputs to best suit the heat and cool sources installed.

Viewing Accessories: Current status of each accessory, remote sensors and window switches.

Pairing Accessories: Pairing to a wireless room sensor or window switch.

Temperature Format: This function allows you to select between °C and °F.

Switching Differential: This function allows you to increase the switching differential of the thermostat. The default is 1°C which means that with a set temperature of 20°C, the thermostat will switch the heating on at 19°C and off at 20°C. With a 2°C differential, the heating will switch on at 18°C and off at 20°C. This setting applies to both heating and cooling.

Condition: Whilst "Optimum Start" is in effect the 'Switching Differential' shall default to 1°C/F

Output Delay: To prevent rapid switching, an output delay can be entered. This can be set from 00 - 15 minutes. The default is 00 which means there is no delay.

Condition: Output delay will not be in effect while 'Optimum Start' is running.

Temperature Up/Down Limit: This function allows you to limit the use of the up and down keys. This limit is also applicable when the thermostat is locked and so allows limited control of the heating/cooling system.

Sensor Selection: On this thermostat, you can select which sensor should be used.

You can select between air temperature, remote air temperature or both. When you enable both sensors, the thermostat will automatically start to calculate an average between each sensor point.



Feature Menu Settings Explained

Deadband: Only selectable when 'Auto' (HEAT & COOL) mode is enabled. Deadband is the temperature difference between the 'HEAT' and 'COOL' set points. This is to prevent heating and cooling operating at the same time working against each other.

Example, 'HEAT' set point at 20°C with a Deadband of 2°C, the minimum allowed 'COOL' set point would be 23°C. This means that if 'COOL' was set to 22°C it would push the 'HEAT' set point to 19°C.

Optimum Start: Optimum start will delay enabling of the heating system to the latest possible moment avoiding unnecessary heating and ensure the building has reached its desired temperature at the programmed time. The thermostat uses the rate of change information to calculate how long the heating needs to raise the building temperature 1°C.

Rate of Change: Number of minutes to raise the temperature by 1°C.

Note: The user cannot change this feature and is for information only.

Programming Mode: The following program modes are available;

- Non-Programmable – Basic up/down override temperature control.
- 5/2 Day Programming – 4 levels for the weekdays and 4 different levels for the weekend.
- 7 Day Programming – 4 levels for each day.
- 24 Hours – 4 levels over a 24 hour period.



Feature Menu Settings Explained

Daylight Saving Time (DST): is where the thermostat sets the clocks forward one hour from 'Standard Time' during the summer months, and back again in autumn, in order to make better use of natural daylight.

Communications ID: To interface with building management systems using the standard Modbus protocol.

Program Type: You can select between 4 or 6 program/comfort levels.

Constant Fan: Fan will automatically run between 'Low', 'Med' & 'High' while there is a demand for heat or cool. When demand has stopped, the fan will continually run but in 'Low' speed only. If 'Constant Fan' is disabled, the fan will go off completely when heat or cool demand has ended.

Note: this feature is disabled in heating mode when 'System Type' is set to 03 = '2 Pipe System Heat or Cool Only'

Cool Air Proof: To avoid blowing the cold air from fan coil when the thermostat requires heating, the coil valve will open for the set duration before fan starts blowing. Set range in seconds: 0, 5, 10, 15, 30, 60, 90. Default value=0 (disabled).

Operating conditions for this function:

1. When Feature 13 Constant Fan is set to = 0
2. System Types =1, 4 or 5 are active
3. Heating mode operation only.



Feature Menu

FEATURE

Type

A

P

01

Menu Entry Point

02

03

04

05

06

07

08

DESCRIPTION

System Type

Viewing Accessory

Pairing Accessories

Temperature Format

Switching Differential

Output Delay

Up/Down Temperature Limit

Sensor Selection

Deadband

Optimum Start

Rate of Change

SETTING

01 = 2 Pipe System, Selectable Heat or Cool only.
02 = 2 Pipe System, Cool only.
03 = 2 Pipe System Heat & Cool (fans for Cool only).
04 = 4 Pipe System Heat, Cool & Auto.
05 = 2 Pipe System Cooling & 2 Stage Heating.

Information only

Commences countdown from 99 – 00 seconds.

00 = °C, 01 = °F (00 = Default)

00 = 0.5°C, 01 = 1.0°C (Default) 02 = 2.0°C, 03 = 3.0°C

00 - 15 Minutes (00 = Default)

00° - 10°C (00° = Default)

00 = Built in Sensor with optional Remote Air (Default)
01 = Remoter Air Only

2°C (3°F) (Default) 3°C (5°F)
4°C (7°F) 5°C (9°F)
6°C (11°F) 7°C (13°F)
8°C (15°F) 9°C (17°F)
10°C (19°F)

00 = Disabled (Default) 01 = 1 Hour 02 = 2 Hours
03 = 3 Hours 04 = 4 Hours 05 = 5 Hours

Information Only



Feature Menu cont...

FEATURE	DESCRIPTION	SETTING
09	Program Mode	00 = 5/2 (Default) 01 = 7 Day 02 = 24 Hour 03 = None programmable
10	(DST) Daylight Saving	00 = Disabled (Default) 01 = Enabled
11	Communications ID (Modbus)	01-32 00 = Disabled (Default)
12	Program Type	00 = 4 Comfort Levels (Default) 01 = 6 Comfort Levels
13	Constant Fan	00 = Off (Default) 01 = On
14	Cool Air Proof	00 = Disabled (Default) 05, 10, 15, 30, 60, 90 seconds



Adjusting the Feature Menu Settings

- Use the 'Left/Right' arrow keys to highlight then press and **hold** the button for 3 seconds
- The display will go blank showing only 'Setup' and 'Clock'*
- Press the 'Up' key followed by twice to access main feature menu



- Use the 'Up/Down' keys to scroll through features
- Use the 'Left/Right' keys to change feature setting
- When all required changes have been made press to confirm settings and return to the blank display
- Use the 'Down' key to select then press **once** to power on



Fail Safe

If the thermostats on board sensor is disabled and is reliant on a single wireless remote sensor for temperature measurement, failsafe will activate if connection is lost.

- From the moment 'E2' is displayed on screen, failsafe will become active.
- Approximately 12 minutes later the thermostat will enable the heat source for an initial 12 minute period and then repeat every hour.
- Failsafe will continue until the thermostat re-establishes connection to the remote sensor.



Modbus

Modbus interface allows the thermostat to be controlled via home automation or a building management system.

- A maximum of 32 devices can be connected to a single RS485 adapter.
- It is recommended that a foil twisted pair (FTP) cable is used for the Modbus connections.
- All Modbus connections should be daisy chained rather than wired in a star formation.
- If the Touch-E V2 thermostat is the last Modbus device on the end of the chain, move the toggle switch on the back of the fascia to the 'On' position.

Connect the
RS485 bus matching
120 ohm resistor



On	Connection
Off	No Connection





Fascia PCB





Re-calibrating the edge-HC

This thermostat is factory set and need not re-calibrating under normal operation!

To calibrate, follow the step below.

- Use the 'Left/Right' keys to scroll to the Power Icon   
- Press and hold ✓ to turn the display 'OFF' ✓
- Press and hold the ✓ and 'Down' keys together for 10 seconds ✓ 

The current temperature will appear on the display.

- Use the 'Up/Down' keys to configure the new temperature value  
- Press the ✓ key to confirm the change and the display will go blank ✓
- Press the ✓ key once to turn the thermostat 'ON' ✓



Error Codes

The edge will display an error code if there is a fault with the temperature sensor.

E0 = The internal sensor has developed a fault.

E2 = The WIRELESS AIR SENSOR has not been paired correctly.


The WIRELESS AIR SENSOR has lost connection to the edge.
(check batteries).

The remote WIRELESS AIR SENSOR is faulty.



Wiring Diagram - Normally Closed Valve


System Types 01 & 02

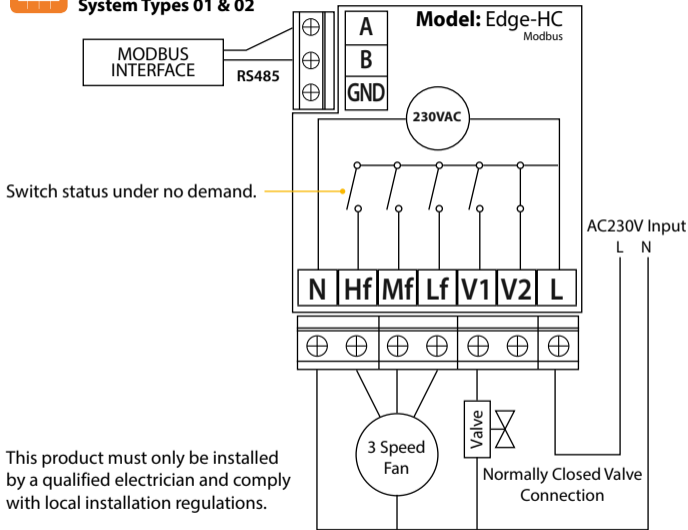



Wiring Diagram - Normally Open Valve

System Types 01 & 02

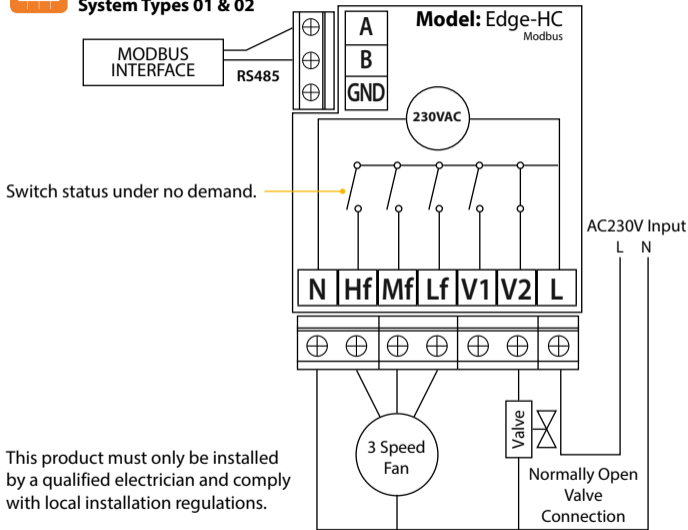


This product must only be installed by a qualified electrician and comply with local installation regulations.



Wiring Diagram - 3 Wire Valve Connection


System Types 01 & 02

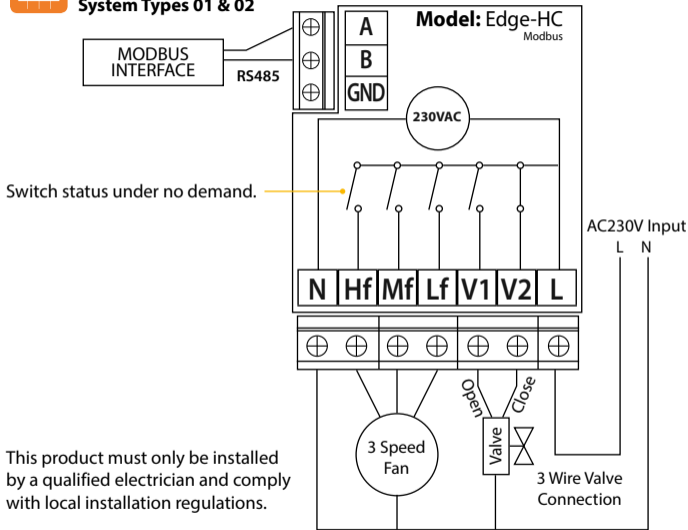



Wiring Diagram - Fan Coil & Wet Systems

System Types 03 & 05

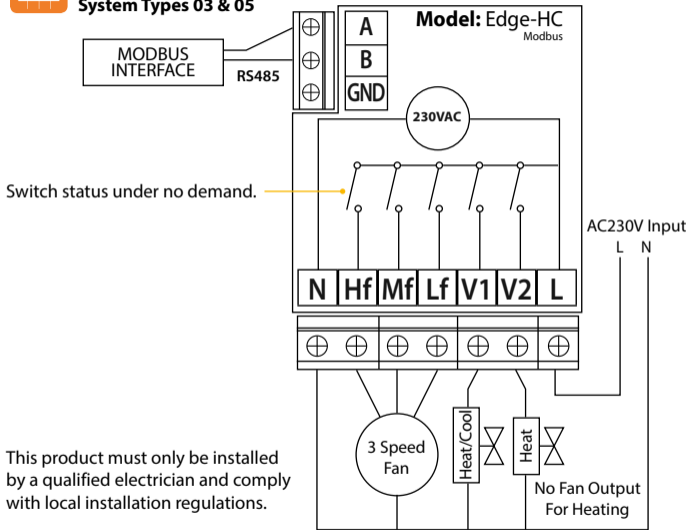


This product must only be installed by a qualified electrician and comply with local installation regulations.



Wiring Diagram - Heat & Cool Valves

System Type 04

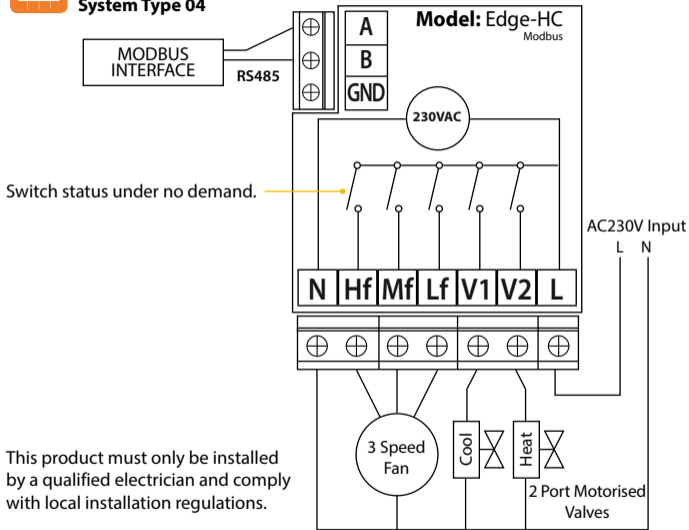

This product must only be installed by a qualified electrician and comply with local installation regulations.



Replacing the Battery

In most cases the 3 volt lithium battery does not need replacing if the thermostat has a continual power supply. Its sole purpose is to ensure correct time keeping during a power loss to the thermostat.

To remove the battery use a small flat head screw driver or fingertip to push back the brass retaining bracket. This will automatically release the battery.

Insert the new battery (positive side up!) by locating one end underneath the holding clips then pushing down on the opposite end against the brass holding bracket.



We advise that replacement of the lithium battery be carried out by a qualified professional.



Notes

A series of horizontal dotted lines for taking notes, spanning the width of the page.



Notes

A series of horizontal dotted lines for writing notes, spanning the width of the page.



Want More Information?

Call our support team on: +44 (0)1254 669090

Or view technical specifications directly on our website:
www.heatmiser.com



PDF



FAQ



Twitter: @heatmiseruk



Facebook: facebook.com/thermostats