



RF-SWITCH


UFM UNDER FLOOR MANIFOLD

LIVE 

NEUTRAL 

EARTH 

END SWITCH AND
BOILER ENABLE 

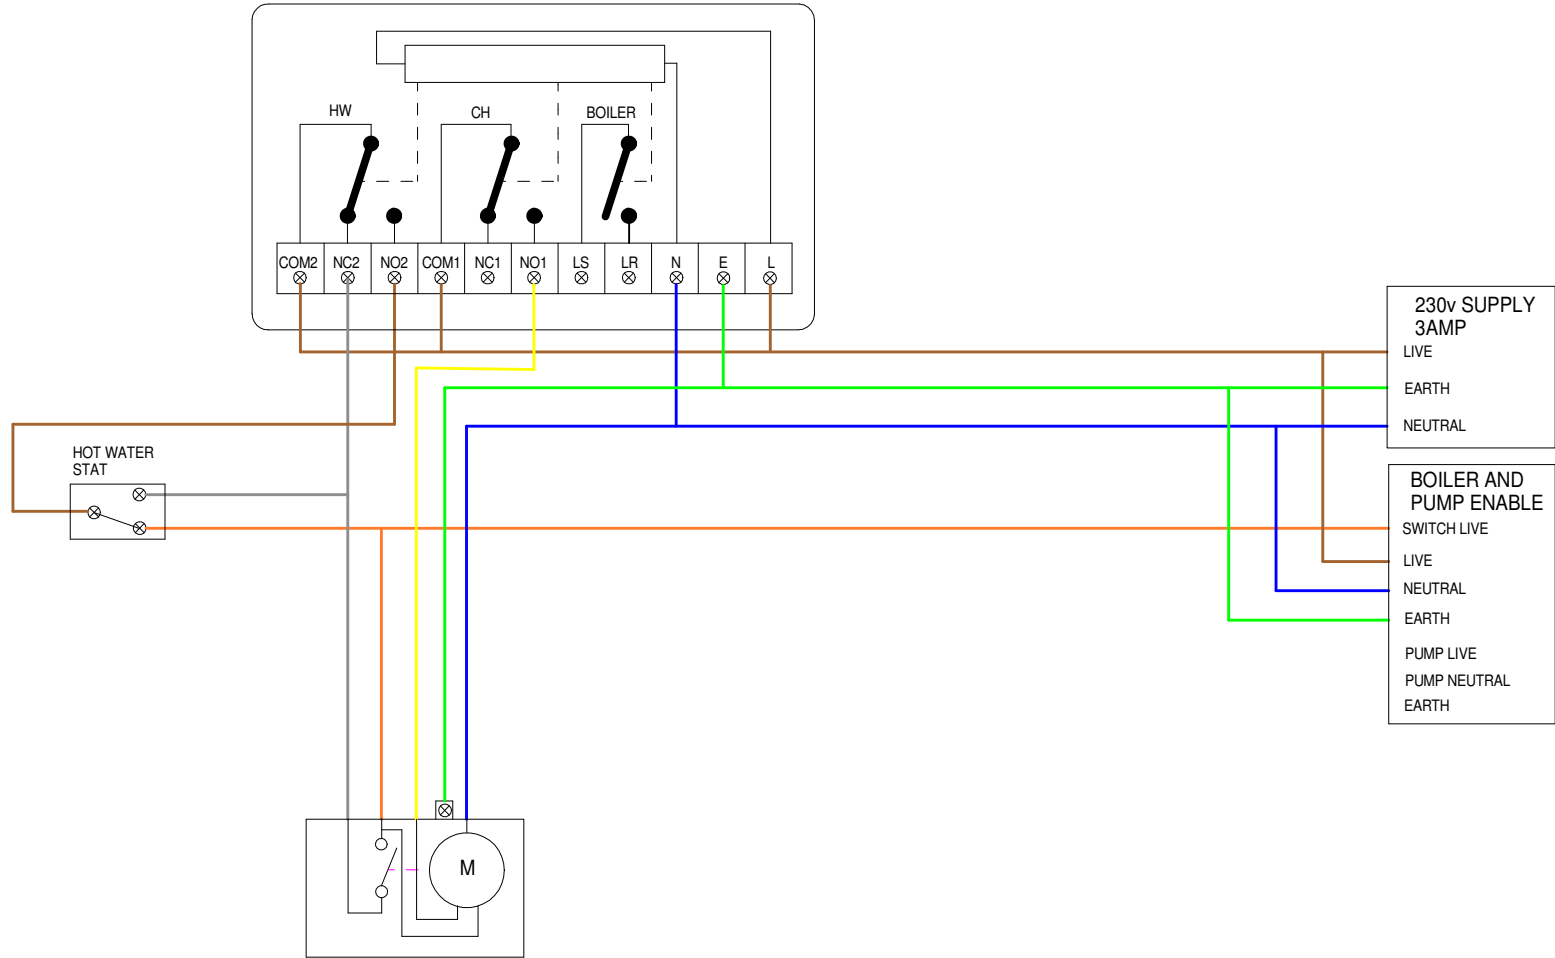


This equipment should be installed by an appropriately qualified/ registered electrician.
Fully read the instructions for proper wiring before applying power.
The warranty does not cover damage from improper wiring or installation.

DRAWING 2
RF-LINK NO 2 WIRING DIAGRAM
13/05/2015