

UH8

UFM UNDER FLOOR MANIFOLD


LIVE ———

SWITCH LIVE ———

NEUTRAL ———

EARTH ———

END SWITCH AND BOILER ENABLE ———

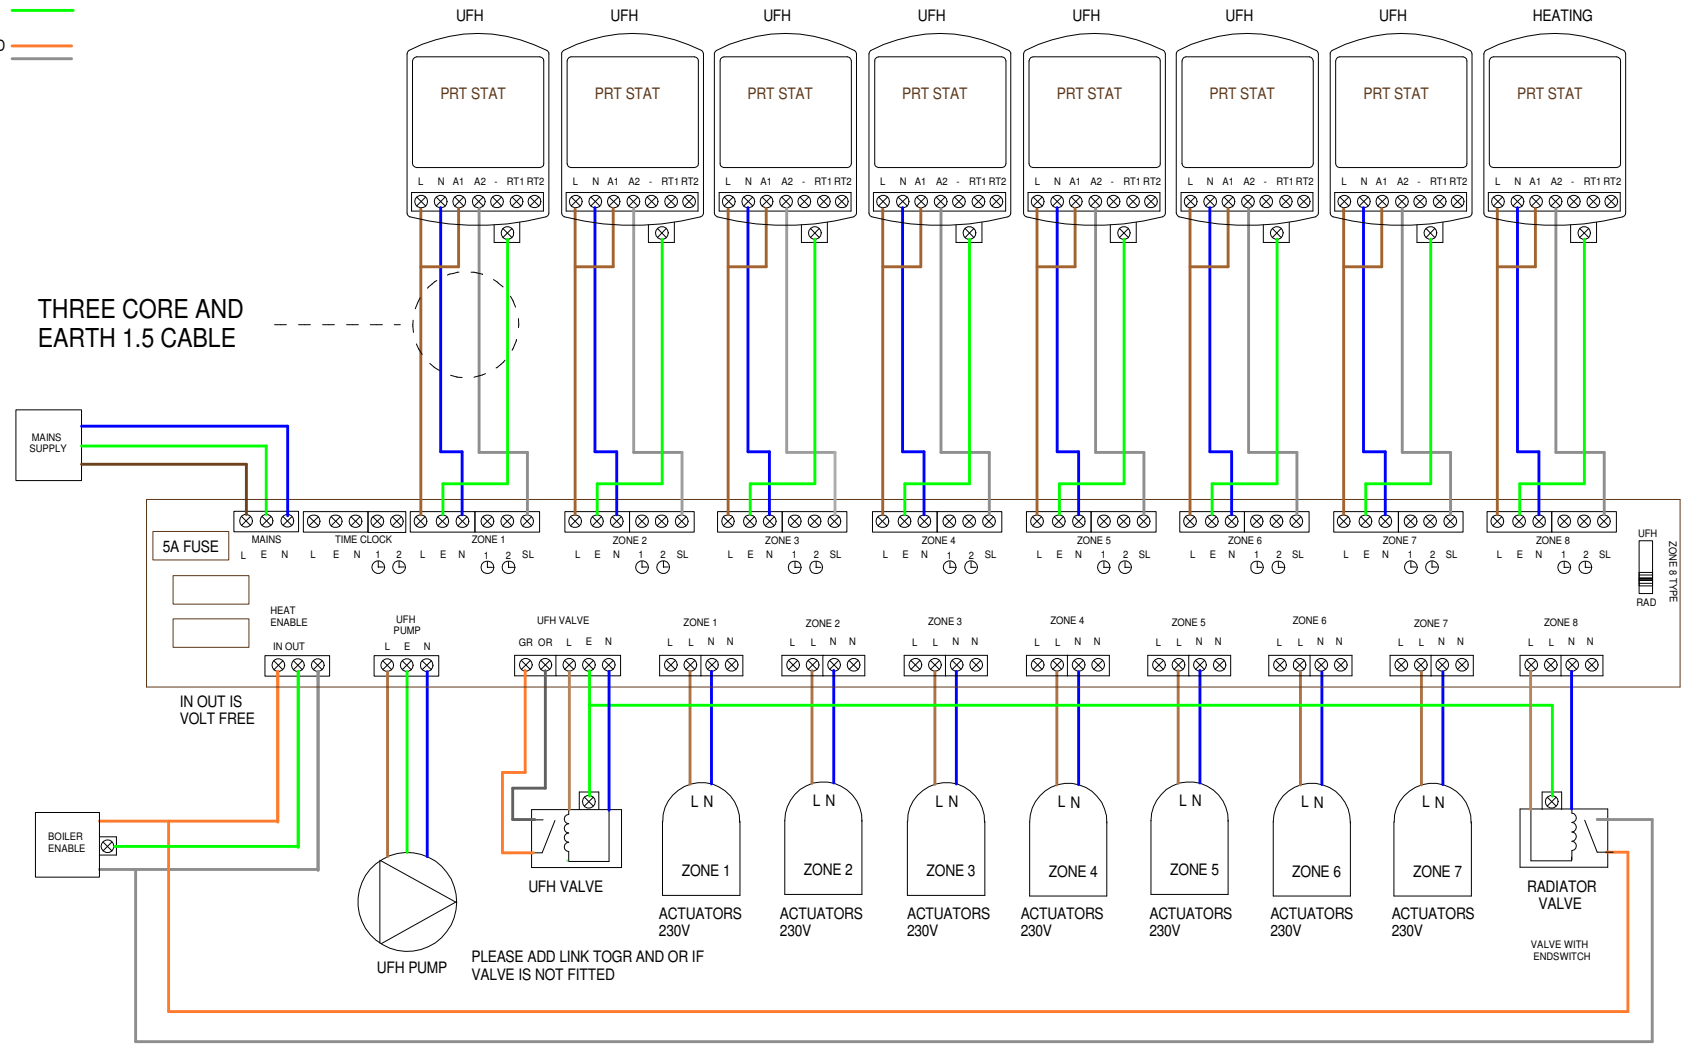

This equipment should be installed by an appropriately qualified/ registered electrician.
 Fully read the instructions for proper wiring before applying power.
 The warranty does not cover damage from improper wiring or installation.

DRAWING 3
PRT TO UH8 WIRING DIAGRAM
13/05/2015