

heatmiser®



Model: **DT-EW**

Model: DT-EW



Table of Contents

Product Image	1
Table of Contents	2
What is a Room Thermostat?	3-4
Installation Procedure	5-6
Installing the Batteries	7-8
Replacing the Batteries	9
Configuring the Thermostat	10
Pairing with the RC2-W Receiver	10
LCD Display	11-12
Temperature Display	13
Locking the Thermostat	14
Setting the Temperature	14
Frost Protection	15
Power On / Off	16
Optional Features	17-20
Re-calibrating the Thermostat	21
Factory Reset	21
Remote Air Sensor Wiring	22



What is a Room Thermostat?

A room thermostat simply switches the heating system on and off as necessary. It works by sensing the air temperature, switching on the heating when the air temperature falls below the thermostat setting, and switching it off once this set temperature has been reached.

Setting a room thermostat to a higher temperature will not make the room heat up any faster. How quickly the room heats up, depends on the design & size of the heating system. Similarly reducing the temperature setting does not affect how quickly the room cools down. Setting a room thermostat to a lower temperature will result in the room being controlled at a lower temperature, and saves energy.

The way to set and use your room thermostat is to find the lowest temperature settings that you are comfortable with, and then leave it alone to do its job. The best way to do this is to set the room thermostat to a low temperature – say 18°C, and then turn it up by 1°C each day until you are comfortable with the temperature. You won't have to adjust the thermostat further.

Any adjustment above this setting will waste energy and cost you more money.

Room thermostats need a free flow of air to sense the temperature, so they must not be covered by curtains or blocked by furniture. Nearby electric fires, televisions, wall or table lamps may also prevent the thermostat from working properly.

This Model DT-EW thermostat has been specifically designed to operate as a wireless room thermostat for electric underfloor heating systems.

Because it is battery powered, it does not require wiring to a power supply and this enables it to be easily located anywhere in the room you want to control.

Model DT-EW is also equipped with different temperature sensor options to control the electric underfloor heating system. The thermostat's built in sensor measures the air temperature at the thermostat position within the room and uses measured values to control the electric underfloor heating system. Alternatively, an optional remote air sensor can be connected with DT-EW and remote air temperature measurements can be used instead to control the electric underfloor heating system. The thermostat enables easy switching between sensor modes providing a remote air sensor is connected.

As DT-EW is a wireless thermostat, it works in combination with an RC2-W wireless receiver.

A floor temperature sensor must be connected to the RC2-W receiver before it will operate and this floor temperature sensor is used to detect when the floor temperature limit has been reached.

In the event of a failure in the RF link between the thermostat and the receiver, the floor temperature sensor protects the floor from overheating and becoming damaged. The limit can be set between 20-45°C and can be easily changed in the feature settings of the thermostat.

Please read the instructions fully to understand all of the features of this DT-EW thermostat.



Installation Procedure



Do
Mount the thermostat at eye level.
Read the instructions fully so you get the best from our product.



Don't
Do not install near to a direct heat source as this will affect functionality.
Do not push hard on the LCD screen as this may cause irreparable damage.

This wireless thermostat is designed to be surface mounted.

Step 1

Carefully separate the front half of the thermostat from the back plate by placing a small flat head terminal driver into the slots on the bottom face of the thermostat.

Step 2

If you are installing a remote air temperature probe, terminate the thermostat as shown in the diagram on page 22.

Mark 2 hole positions on the wall using the backplate as a positioning template. Drill at the marked positions and insert a wall plug into each hole.

Step 3

Screw the thermostat back plate securely on the wall.

Step 4

Clip the front of the thermostat back onto the thermostat back plate.





Installing the Batteries

2x AAA batteries have been supplied with this thermostat.

To access the battery holder, push and release the compartment door located on the bottom face of the thermostat.



Insert the batteries in the empty battery holder, ensuring that each battery is orientated for the correct polarity + / - .

Push the battery holder back inside the thermostat until it is secured in its closed position.




Replacing the Batteries

Batteries have a fixed lifespan and will need to be replaced occasionally to ensure the thermostat operates correctly.

The thermostat will inform you when the batteries need to be replaced by displaying the battery icon on screen.

Note: You must replace the batteries within 1 minute of removal in order to retain the current settings.

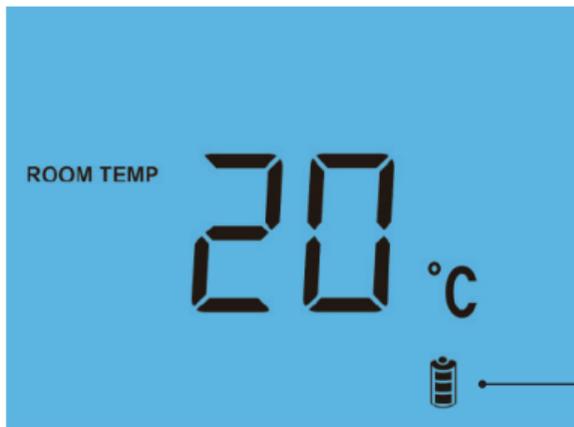

Battery Icon
(Flashes)



Configuring the Thermostat

With the thermostat turned OFF:


- Press & hold the Clock button until the LCD screen comes on 
- You will now see 01 in the top right hand corner. This is feature 01.
- Press the clock again until you see feature 07 (receiver address) 
- Use the Up/Down keys to set the address  
A unique receiver address must be set for each receiver installed.
(RF is disabled if receiver address is set to 00).
- Press A to confirm settings and the display will go blank 



Pairing the RC2-W Receiver

- On the receiver, press and hold the Pairing button until the Comms LED lights up.
- With the thermostat turned OFF, press & hold the A button for 5 seconds ... 
- The thermostat will send a signal for 1 minute and will flash the RF signal icon.
- If pairing is successful, the Comms LED on the receiver will flash.
- Press the Power button on the thermostat once to confirm pairing 

If pairing is unsuccessful, check feature 07 has been configured correctly. To eliminate a possible signal issue, reposition the thermostat closer to the receiver and repeat the pairing process again.

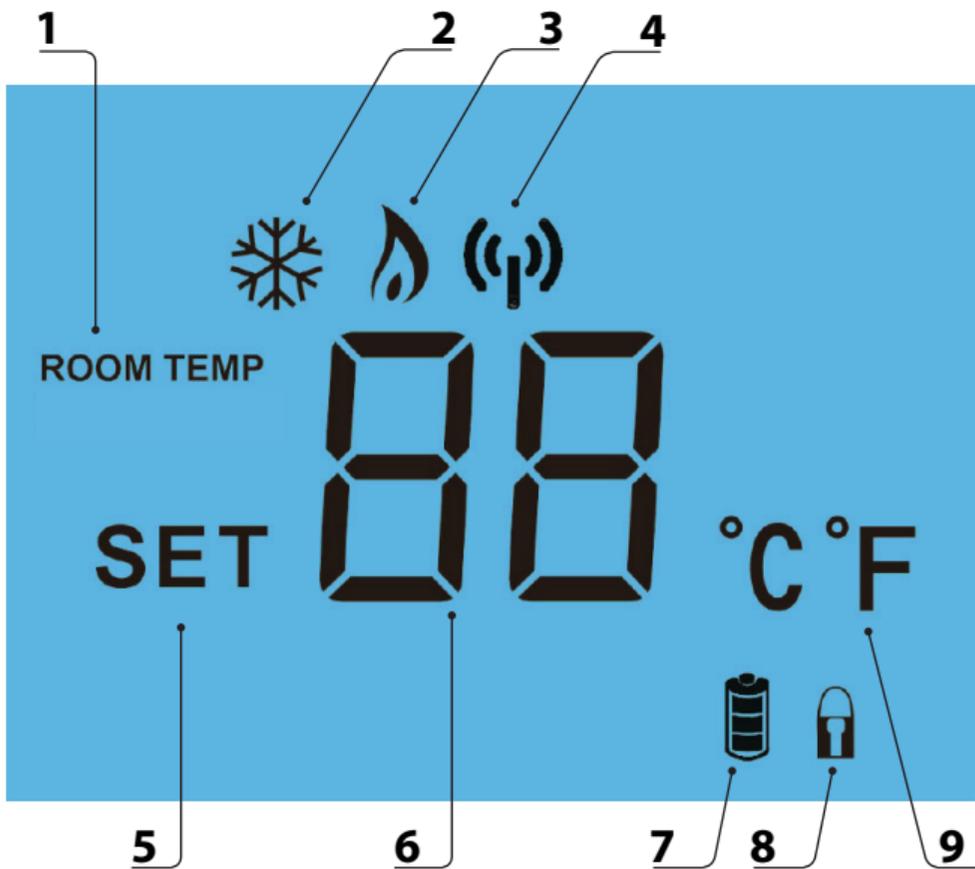


LCD Display

1. Room Temp - Indicates the current temperature sensor mode.
2. Frost Icon - Displayed when the thermostat is in frost protection mode.
3. Flame Icon - Displayed when the thermostat is calling for heat.
4. RF Icon - Flashes when the thermostat communicates with the receiver.
5. Set - Indicates when changes are being made to programs or temperature set points.
6. Current Temp - Indicates the current sensor temperature.
7. Battery Level - Indicates when the batteries require replacement.
8. Keypad Lock Indicator - Displayed when the keypad is locked.
9. Units of Temperature - Degrees Celsius or Fahrenheit.

Temperature Display

The temperature display information is driven by two different inputs; the sensor measurement and the target temperature you have set.

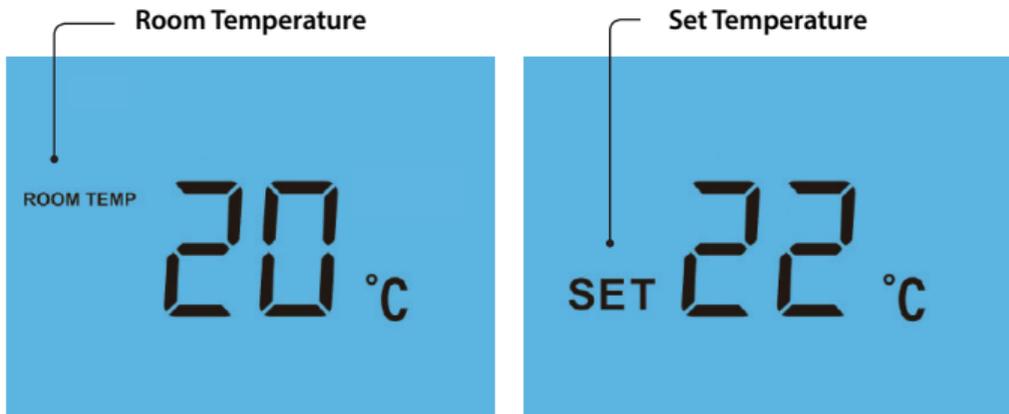


This is the current room temperature.

This is the temperature you are trying to achieve in your home.

Locking the Thermostat

The thermostat has a keypad lock facility. To activate the lock follow these steps.

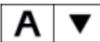- Press and hold the A and Down keys together for 10 seconds 
- You will see the lock symbol appear on screen 
- To unlock, repeat the steps above until the lock symbol disappears.

Note: The keypad lock indicator is only displayed when the lock is active.

Temperature Control

The Up/Down keys allow you to adjust the set temperature 

When you press either key, you will see the word SET and the desired temperature will be displayed on screen.

Use the Up/Down keys to adjust the SET value 

Press A to confirm settings and return to main display 

Note: This override will be maintained until the next programmed comfort level.




Frost Mode

Pressing the Power button  once will place the thermostat in frost protect mode.

In this mode, the thermostat will display the frost icon and will only turn the heating on should the room temperature drop below the set frost temperature (see page 19).

Should the heating be turned on whilst in frost mode, the flame icon will be displayed.

To cancel the frost protect mode, press the Power button once again. 

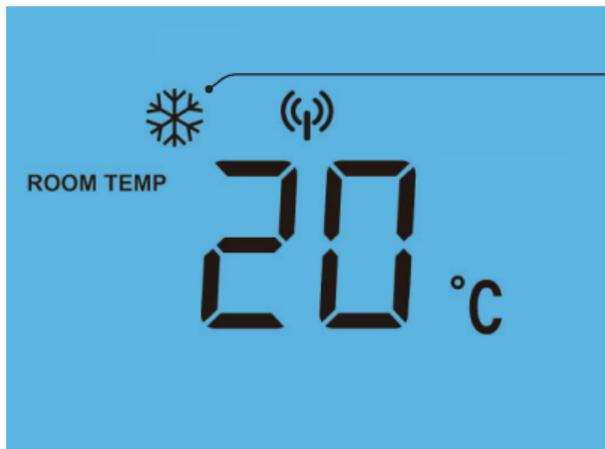

Frost Protection Mode Enabled



Heating On/Off

The heating is indicated ON when the flame icon is displayed.

When the flame icon is absent, there is no requirement for heating to achieve the set temperature but the thermostat remains active.

To turn the thermostat OFF completely, press and hold the Power button..... 
The display and heating output will be turned OFF completely.*

To turn the thermostat back ON, press the Power button once again 

Thermostat completely OFF



Thermostat powered ON



*See Feature 3 on page 17



Optional Features Explained

THE FOLLOWING SETTINGS ARE OPTIONAL AND IN MOST CASES NEED NOT BE ADJUSTED

Feature 01 - Temperature Format: This function allows you to select between °C and °F.

Feature 02 – Switching Differential: This function allows you to increase the switching differential of the thermostat. The default is 1°C which means that with a set temperature of 20°C, the thermostat will switch the heating on at 19°C and off at 20°C. With a 2°C differential, the heating will switch on at 18°C and off at 20°C.

Feature 03 – Frost Protect: You can set whether the thermostat will maintain the frost temperature when the thermostat display is turned off. As a default, this is enabled.

Feature 04 – Frost Protect Temperature: This is the temperature maintained when the thermostat is in frost mode. The range is 07 - 17°C. The default is 12°C and is suitable for most applications.

Feature 05 – Output Delay: To prevent rapid switching, an output delay can be entered. This can be set from 00 - 15 minutes. The default is 00 which means there is no delay.

Feature 06 – Not used on this model.

Feature 07 – Receiver Address: Within one building, up to 32 RC2-W's can be used. Each receiver must have a unique receiver address (01-32).

Feature 08 – Not used on this model.

Feature 09 – Not used on this model.

Feature 10 – Fail Safe: If enabled, the thermostat will send a signal to the receiver every 20 minutes. Should the receiver fail to receive two signals, the receiver will activate the output for 20% of the time. This is to protect the system against a loss of wireless signal and in case the thermostat battery fails whilst you are away.

Feature 11 – Up/Down Temperature Limit: This function allows you to limit the use of the up and down keys. This limit is also applicable when the thermostat is locked and so allows you to give others limited control of the heating system.

Feature 12 – Air Sensor Selection: On this thermostat, you can select which sensor should be used - built in sensor or remote air sensor. A floor sensor **MUST** be connected to the receiver before it will operate.


Feature 13 – Floor Limit: This thermostat uses the floor limiting sensor connected to the receiver to protect the floor surface from overheating. The floor limit is set from the thermostat but stored in the receiver. Should the RF link fail, the receiver will limit the floor from overheating. The limit can be adjusted from 20-45°C. The default is 28°C.



Adjusting the Optional Settings

To adjust the optional settings, follow these steps.

- Press and hold the Power button to turn the thermostat OFF 
- Press and hold the Clock button until the display appears as shown below ... 

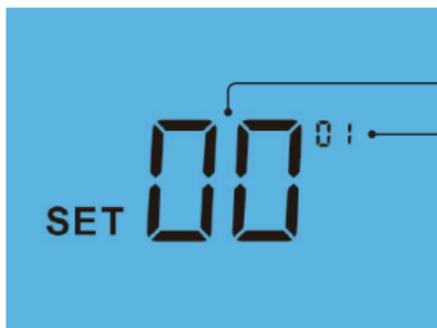

- Use the Clock button to cycle through the features 
- Use the Up/Down keys to change the setting 
- Press A to confirm settings 
- Press the Power button once to turn the thermostat back ON 



Optional Settings - Feature Table

FEATURE	DESCRIPTION	SETTING
01	Temperature Format	00 = °C 01 = °F (°C = Default)
02	Switching Differential	01° - 03°C (01°C = Default)
03	Frost Mode	00 = Disabled 01 = Enabled (01 = Default)
04	Frost Protection Temperature	07° - 17°C (12°C = Default)
05	Output Delay	00 - 15 Minutes (00 = Default)
06	Note used on this model.	
07	RC2-W Address	01-32
08	Not used on this model.	
09	Not used on this model.	
10	Fail Safe	00 - Disabled, 01 = Enabled
11	Up/Down Limit	00° -10°C (00°C = Default)
12	Sensor Selection	00 - Built in sensor, 01 = Remote air sensor
13	Floor Limit	20-45°C (28°C = Default)



Re-calibrating the Thermostat

If you need to re-calibrate the thermostat, follow these steps.

- Press and hold the Power button to turn the thermostat OFF 
- Press and hold BOTH the Power and Down keys together until the temperature appears on the screen 
- Use the Up/Down keys to configure the new temperature 
- Press A to confirm settings 
- Press the Power button once to turn the thermostat back ON 



Factory Reset


The thermostat has a reset function to restore all settings to their factory defaults.

To perform a factory reset, follow these steps.

- Press and hold the Power button to turn the thermostat OFF 
- Press and hold the Power and Up keys together until the LCD powers up. All of the icons will be displayed on screen 
- When the icons have disappeared from the screen, the thermostat has been successfully reset.
- Press the Power button once to turn the thermostat back ON 



Wiring Diagram - Remote Air Probe

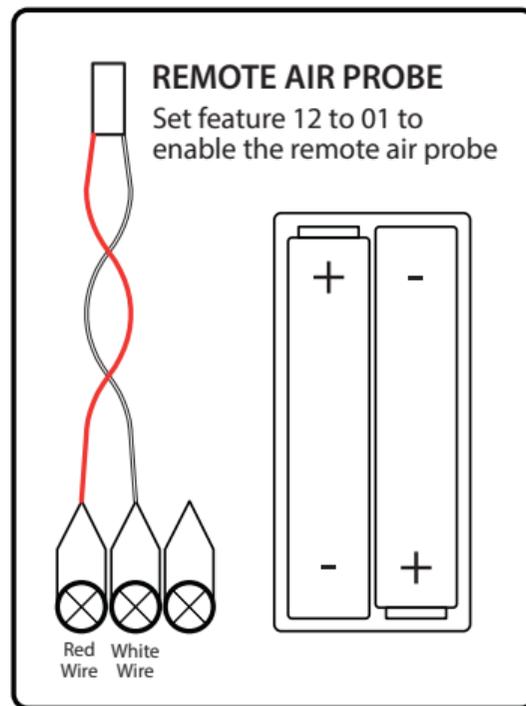



Heating Professionals:
Request a copy of our product installation guide containing detailed technical specifications for our complete product range:
www.heatmiser.com/guide

Want More Information?

Call our support team on: +44 (0)1254 669090

Or view technical specifications directly on our website:
www.heatmiser.com



PDF



FAQ



Video



Twitter: [heatmiseruk](https://twitter.com/heatmiseruk)



Facebook:
facebook.com/thermostats